


RAISED GARDEN L SHAPE ASSEMBLY INSTRUCTIONS

Preparation before starting:

- Select a flat site with sufficient space for the proposed raised garden.
There may be small variations in board length and thickness due to sawmill tolerance. You will need to consider this when “stacking” the boards as described.

Assembly Instructions:

1. Place boards into position as per the plan to create the initial shape (one board high only, with overlaps as shown)
2. Check that corners are square. Check diagonal measurements (which should be equal to each other)
3. Attach the aluminium corner brackets to the single height board on as shown in plan, whilst keeping the base of the bracket 10mm above the base of the bottom board.
3a. NOTE: Leave a small amount of space between the bracket and the end face of the boards (3mm) to allow tolerance. **3b.**(Note: This bracket is placed on the inside)
4. Stack the remaining boards in place – and complete the screwing of the aluminium brackets.

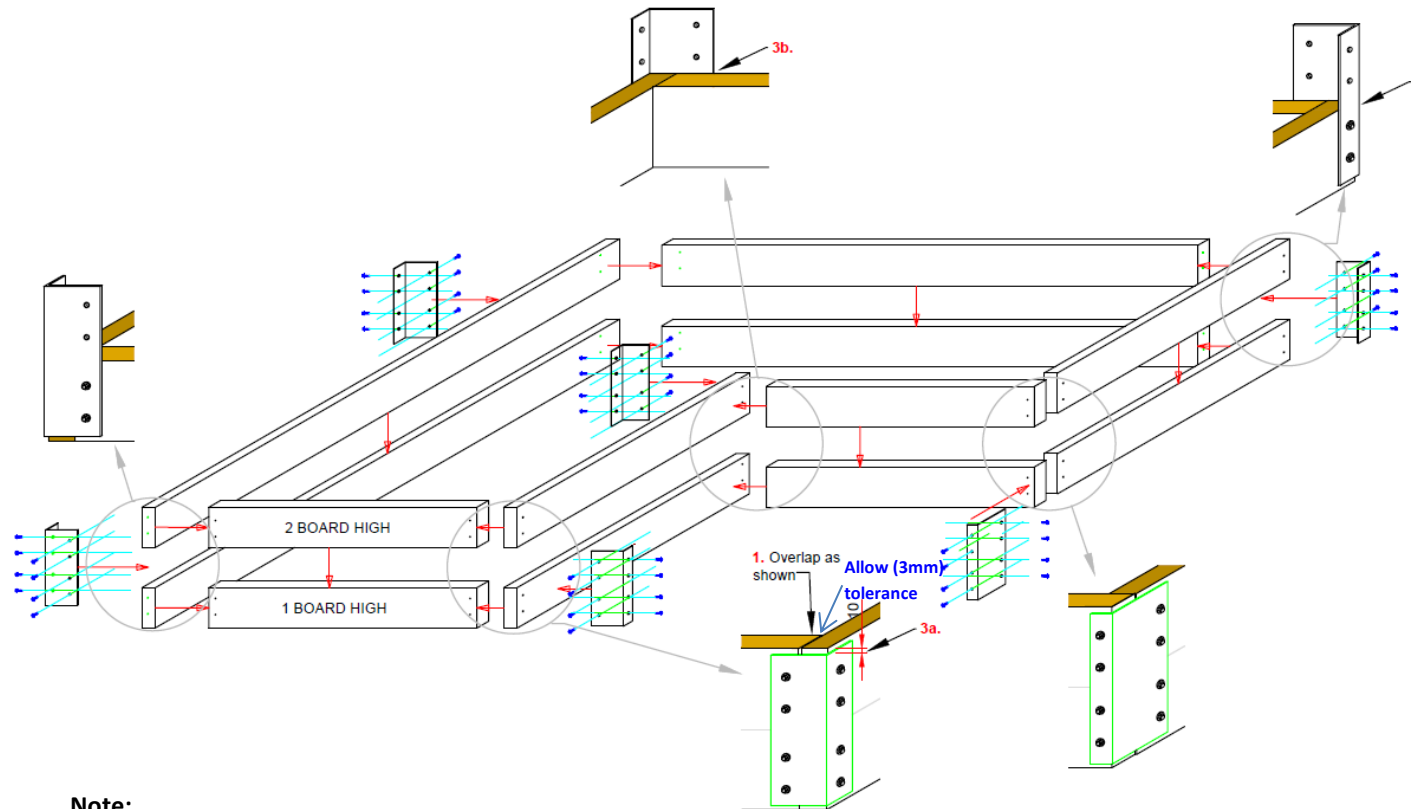

Note:

- Over time some of the 3m length board gardens may require an additional timber stake to be placed midway along their length, especially if gardens are fully filled with heavy back-soil.
- Spare boards and corner brackets are held in stock at Redpath Free Phone if needed.
- Corner brackets can be adjusted at any time before back-filling, so as to create a neat top board joint appearance.



www.redpath.co.nz

Ph: 0508 733 728

Fax. 0508-733-727